

3301 E. Deseret Drive St. George, Utah 84790 wilsonelectronics.com tech@wilsonelectronics.com

Phone 1-866-294-1660 Fax 1-435-656-2432



BD800NM-M Bi-Directional Amplifier/Repeater for iDEN In Vehicle Installation Guide

The information provided by Wilson Electronics, Inc. is believed to be complete and accurate. However, no responsibility is assumed by Wilson Electronics, Inc. for any business or personal losses arising from its use, or for any infringements of patents or other rights of third parties that may result from its use.

FCC ID: PWOBD800NM


Copyright © 2002 Wilson Electronics, Inc.

Rev 1 MODEL: BD800NM-M

PART#: 804002

TABLE OF CONTENTS

1. PACKAGE CONTENTS	page 3
2. ANTENNA OPTIONS	page 3
3. PURPOSE OF THE BD800NM-M	page 4
4. HOW THE BD800NM-M FUNCTIONS	page 4
5. FEATURES	page 4
6. AMPLIFIER SPECIFICATIONS	page 4
7. AMPLIFIER/REPEATER INSTALLATION page	e 5 & 6
8. TECH SUPPORT	page 6
9. NOTES & WARNINGS	page 6

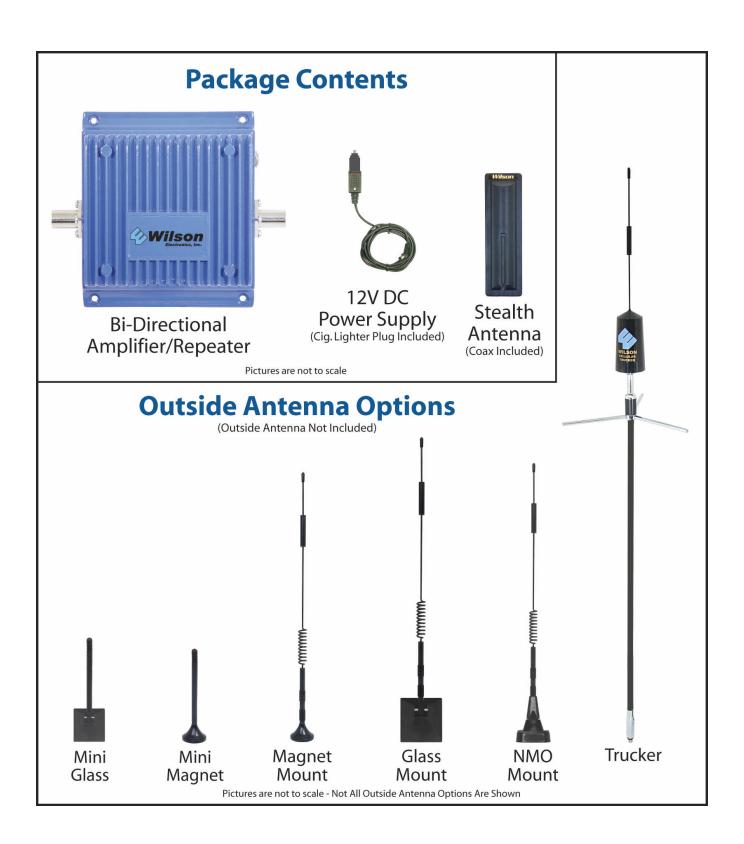

1. PURPOSE OF THE BD800NM-M

The BD800NM-M Bi-Directional Amplifier/Repeater greatly improves RF coverage for areas in which low signal strength or no signal is a problem when using your portable iDEN phone inside the car.

2. HOW THE BD800NM-M FUNCTIONS

The signal is received by the outside antenna from the cell site. It is then AMPLIFIED/REPEATED and transmitted to your iDEN phone through the inside antenna. When the phone transmits it is received by the inside antenna. It is then AMPLIFIED/REPEATED and transmitted to the cell site through the outside antenna.

3. FEATURES

Wireless Operation - No Physical Connection to Cellphone

The BD800NM-M Amplifier / Repeater greatly improves signal strength inside a vehicle without a physical connection to your phone. It also allows multiple phones to be used simultaneously.


Advanced Electronics Receive & Transmit Better Than Your Cellphone

The Wilson Cellular Amplifier / Repeater has a better receiver than what's in your cellphone. Its advanced electronics are very sensitive and able to receive small signals that would go undetected by most cellphones. It also has a better transmitter with double the power of your cellphone. This allows your voice to be heard by distant cell sites, increasing coverage up to 50 miles or more.

4. AMPLIFIER SPECIFICATIONS

Frequency	806-821 MHz Uplink 851-866 MHz Downlink
Gain	37dB Uplink 37dB Downlink
Flatness	+/- 3dB Uplink +/- 3dB Downlink
Max RF Output Power	+31dBm Üplink +15dBm Downlink
Noise Figure	5dB Uplink 5dB Downlink
Uplink Downlink Isolation	More than 90dB
Power Consumption	12V, 1.5A
Connecter	FME-Male 50 Ohms
Dimensions	5.5 x 4.3 x 1.4 (inches) OR 14.0 x 10.8 x 3.5 (cm)
Weight	1.32 pounds or 600 grams
Model #	BD800NM-M
Part #	804002

5. AMPLIFIER/REPEATER INSTALLATION (REFER TO ILLUSTRATION)

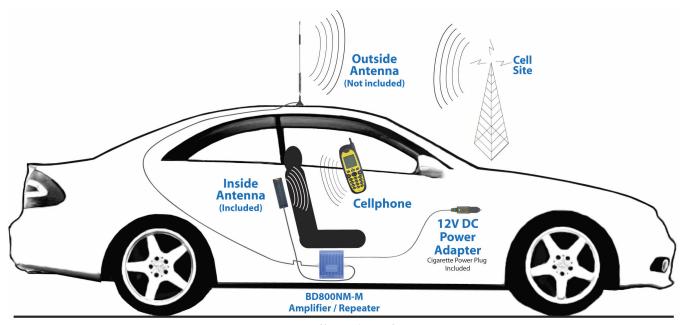

ILLUSTRATION

5.1 Mounting the Amplifier/Repeater

5.1.1 Mount the AMPLIFIER/REPEATER under the dash or car seat.

NOTE: The amplifier should be mounted to the selected location using mounting screws. (Mounting screws not included.)

5.2 Installing the Outside Antenna (Sold Separately)

- 5.2.1 Select an outside mounting location. For best performance try to keep the antenna centered on the car's / truck's roof.
- 5.2.2 The outside antenna should be located in an area with at least a 12" radius clear of obstructions, and other radiating elements.

NOTE: When using a <u>magnet mount, NMO or trucker antenna</u>, keep the separation distance between the inside and outside antennas at least 4ft. When using a <u>glass mount antenna</u>, keep the separation distance between the inside and outside antennas at least 5ft.

WARNING: The outside antenna used with this amplifier must be mounted with a separation distance of at least 8 inches from all persons and must not be co-located or operating in conjunction with any other antenna or amplifier.

5.2.3 Connect the Outside Antenna to the AMPLIFIER/REPEATER side labeled "OUTSIDE ANTENNA".

5.3 Installing the Inside Antenna (Included)

- 5.3.1 Connect the Inside Antenna to the side labeled "INSIDE ANTENNA" on the AMPLIFIER/REPEATER.
- 5.3.2 The Inside Antenna should be centered in the vehicle. It can be placed in the seat back between the seat cushion and fabric or in the vehicle headliner.

WARNING: The inside antenna used with this amplifier must be mounted with a separation distance of at least 8 inches from all persons and must not be co-located or operating in conjunction with any other antenna or amplifier.

5.4 Connect the 12V Power Supply

5.4.1 Connect the large end of the 12V Power Supply into your cigarette lighter and the other end into the input on your amplifier labeled "DC 12V IN".

7. TECH SUPPORT

If you need further assistance with your installation please call us Toll-Free at 866-294-1660 or send an E-mail to tech@wilsonelectronics.com

Our Hours of Operation are: 8:00 AM – 4:30 PM (Mountain Time)

8. NOTES & WARNINGS

NOTE: When using a <u>magnet mount, NMO or trucker antenna</u>, keep the separation distance between the inside and outside antennas at least 4ft. When using a <u>glass mount antenna</u>, keep the separation distance between the inside and outside antennas at least 5ft.

WARNING: The outside antenna used with this amplifier must be mounted with a separation distance of at least 8 inches from all persons and must not be co-located or operating in conjunction with any other antenna or amplifier.

WARNING: The inside antenna used with this amplifier must be mounted with a separation distance of at least 8 inches from all persons and must not be colocated or operating in conjunction with any other antenna or amplifier.